


## VENTIFLEX DUO - INSTALLATION

Ventiflex Duo is a concept, and not a product. Ventiflex Duo can be installed as standard Ventiflex ductlines, except for the transitionpiece from one duct to the duo-duct. The recommended hook should be the VF-hook, as this can easily be used to adapt the recommended distance from duct to wire ( see below: Y )

### Installation

1. Fix the wire to the rock, as in normal circumstances. Adapt the distance from the wire to the rock, to reduce the risk for the ducts to scratch the rock, when in use. ( distance X )

### THE PROTAN VENTIFLEX DUO CONCEPT

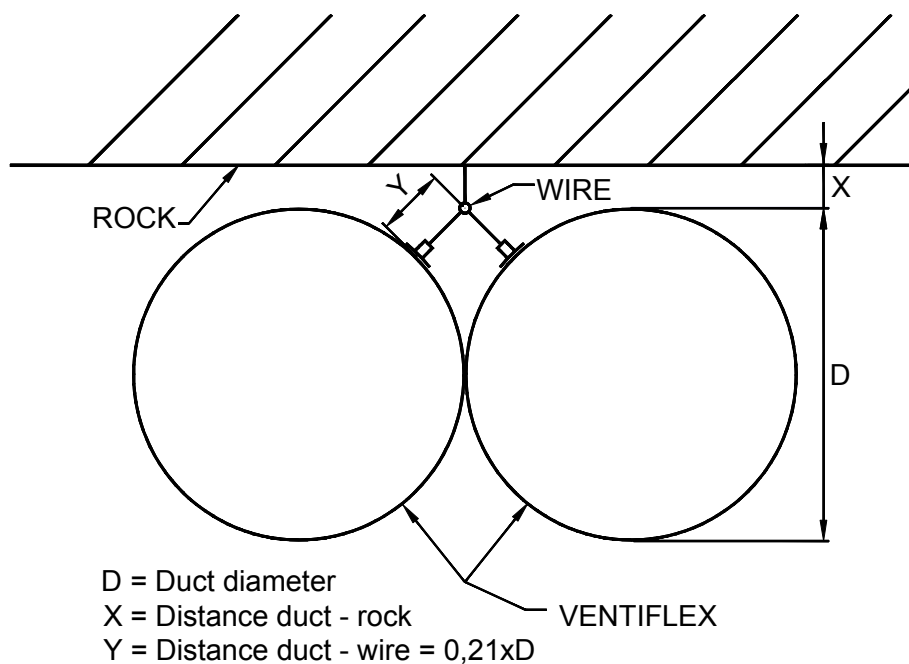

2. If the duct scratches the rock during normal use, it is recommended to protect the duct with a piece of tarpaulin, or similar.
3. Decide where you want to start with the duo-duct, and install the transition piece at this spot.



4. Fix both ducts, simultaneously if possible, with VF-hooks in every second eyelet. It is recommended to adapt the distance ( Y ) between the wire and the duct as described above.
5. In conjunction with bends, cut the outer duct ahead of the inner duct. Use Ventiflex bend details with VF-coupling to improve the airflow to maximum. ( see picture )

